 
 


Utility Tall Cabinet

ASSEMBLY INSTRUCTION

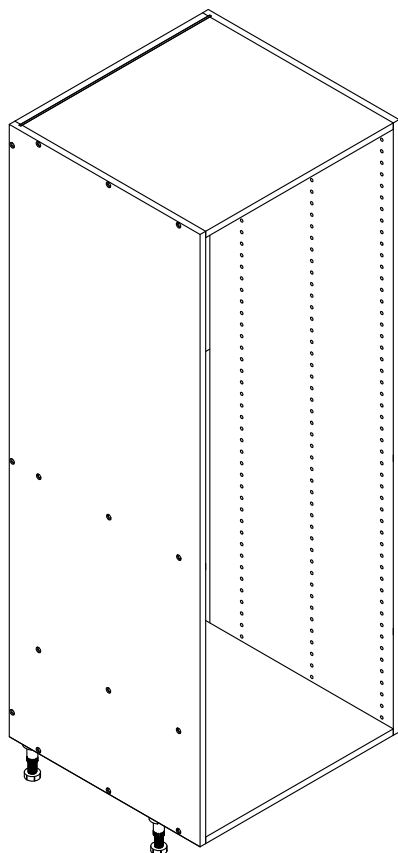

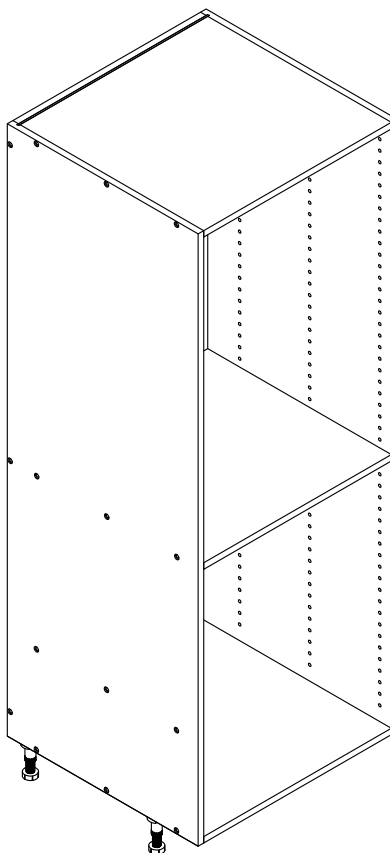






Open Utility for use
with Pantry Insert



Split usage Utility



Item No.

UT1267
UT1567
UT1867
UT2467
UT3067

Hardware Fitting			
1	Screw	 Ø7*50mm (2")	24PC
2	Leg	 4 1/2"	4PC
4	Ø8mm Cover		24PC
5	Screw for Leg	 Ø4*15mm (5/8")	20PC
6	Screw for Drawer Front	 Ø4*25mm (1")	16PC
7	Bracket		0/2/3PC
8	Screw for Bracket	 Ø4*15mm (5/8")	0/16/24PC


A	Left Side Panel	1PC
B	Right Side Panel	1PC
C	Top/Bottom Panel	2PC
D	Support Rail	3PC
E	Back Panel	1PC
F	Shelf	0/1PC

  Note: There is a fixed shelf for use if not using a full pantry

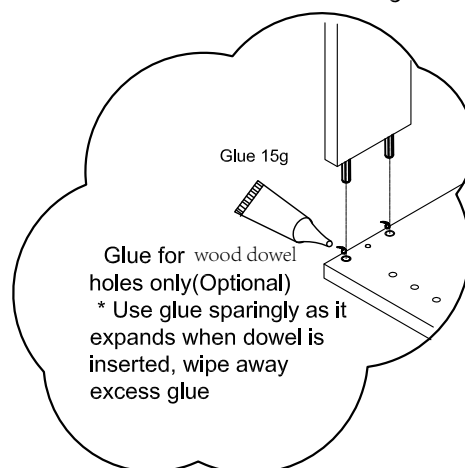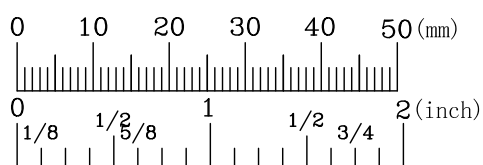


Open Utility for use with Pantry Insert

 Step1

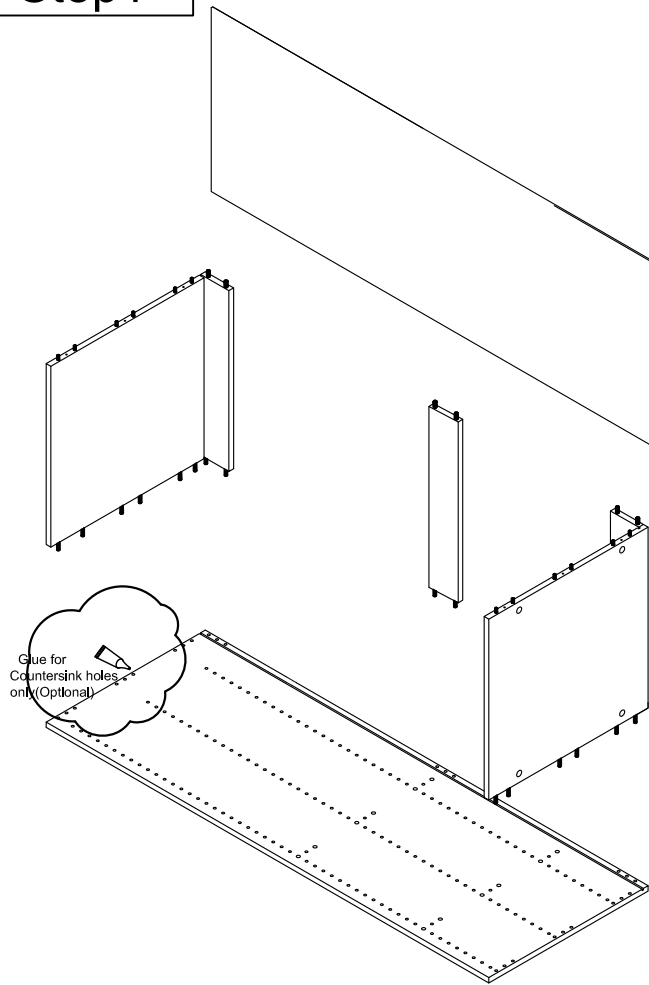


 Step2

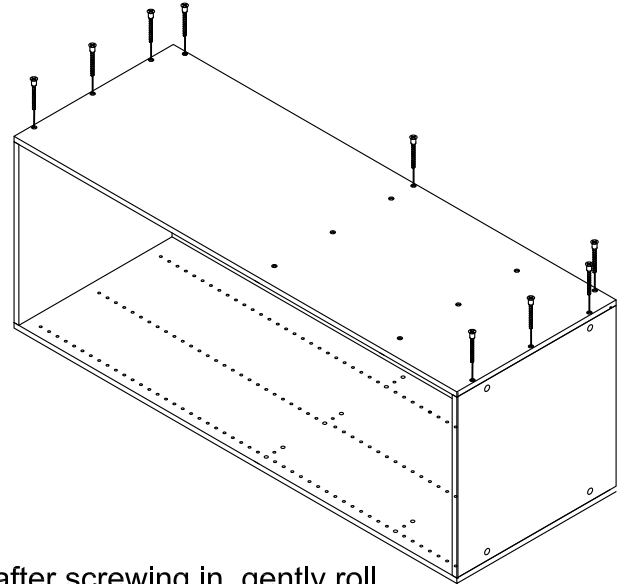


*after screwing in, gently roll cabinet on its back and complete the screw attachment on the other side

 Step3

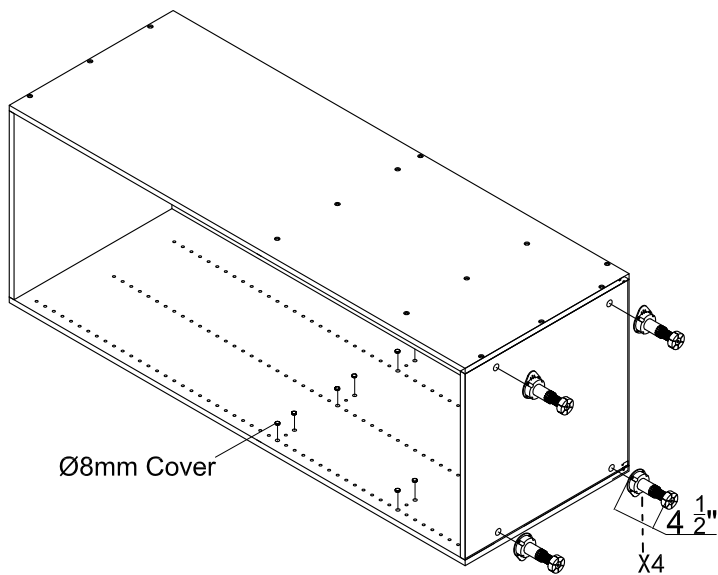


Step4

 Split usage utility

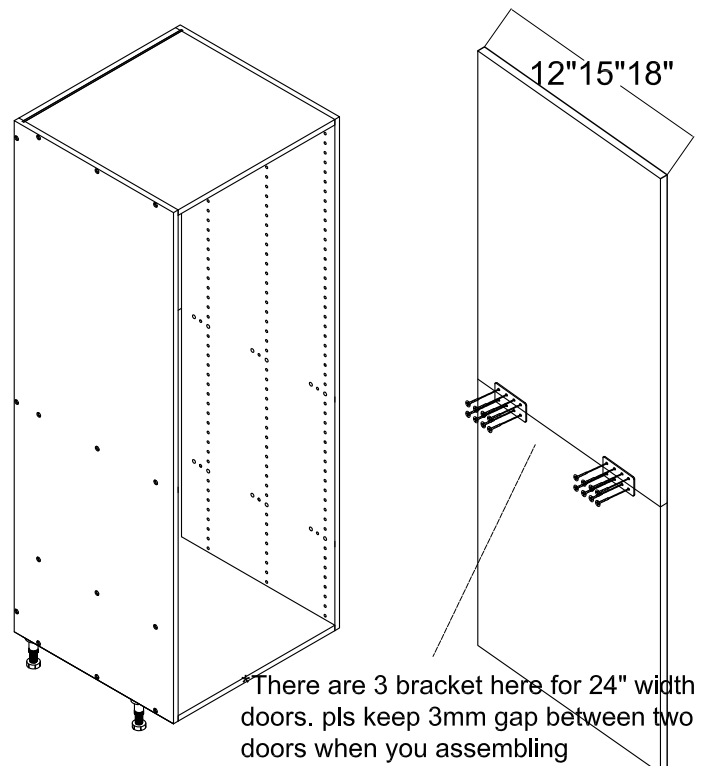


Split usage Utility

 Step1

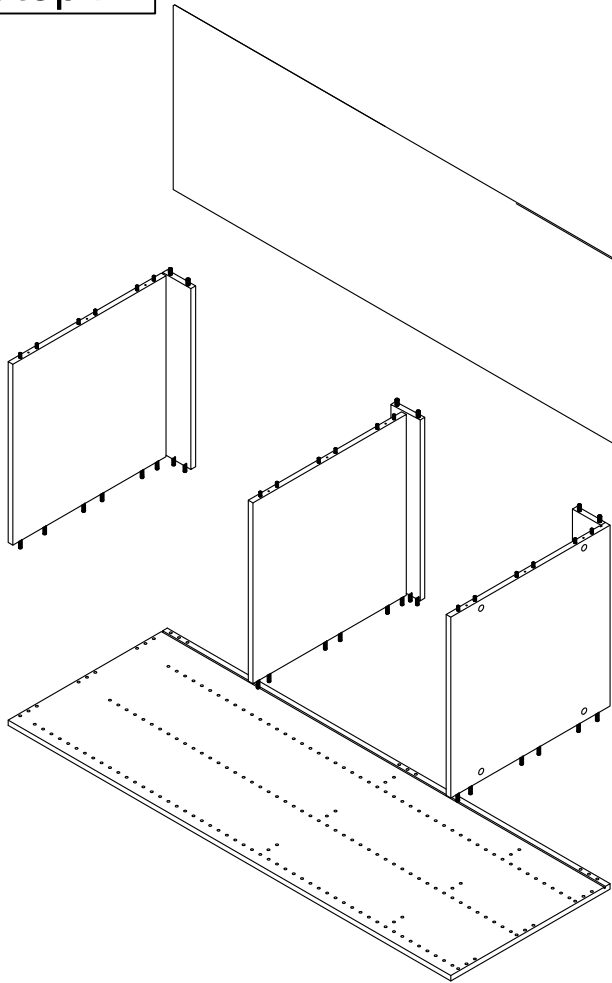


 Step2

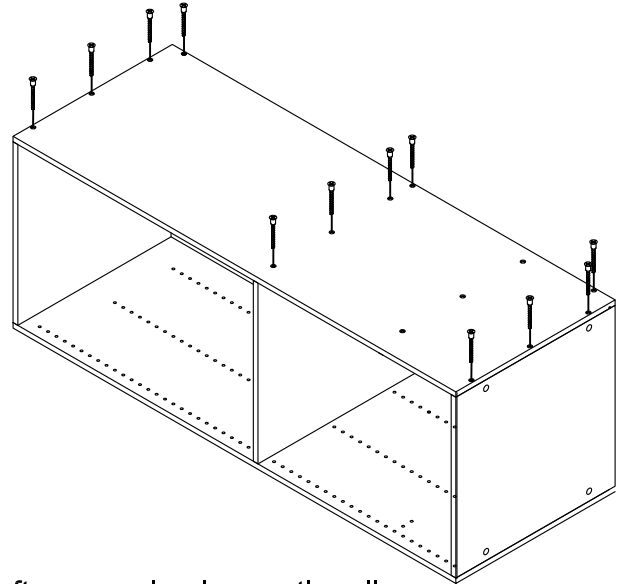


*after screwing in, gently roll cabinet on its back and complete the screw attachment on the other side

 Step3



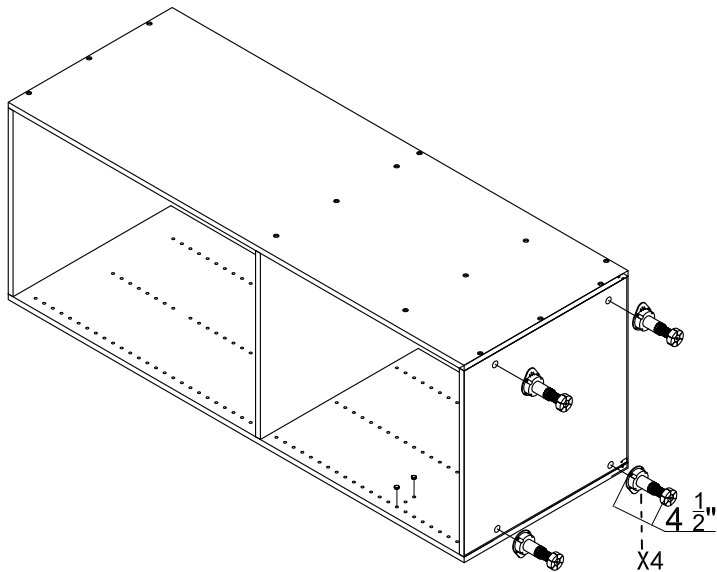


 Step4



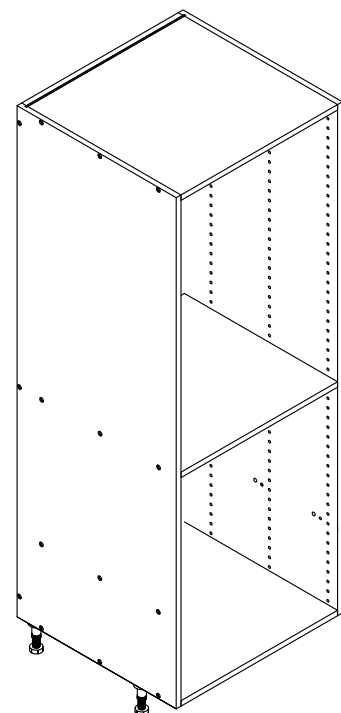






Full Door Utility

   (adjustable shelves sold separately)

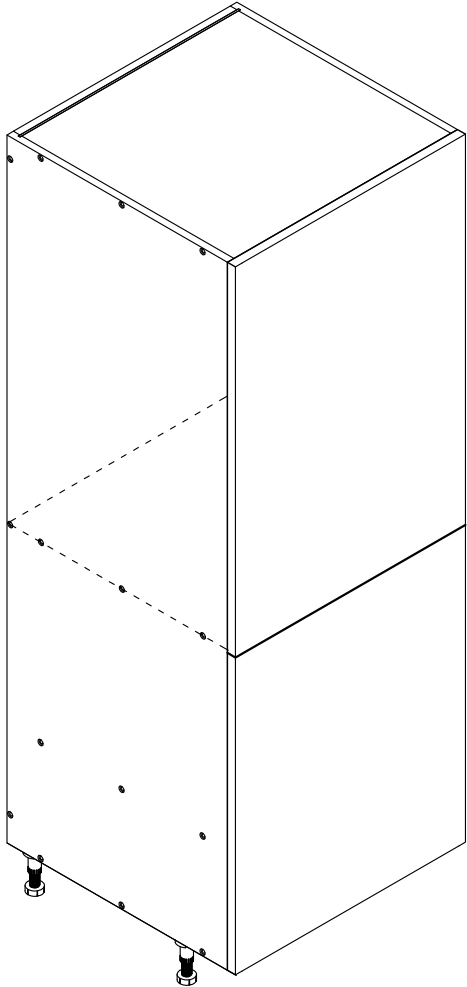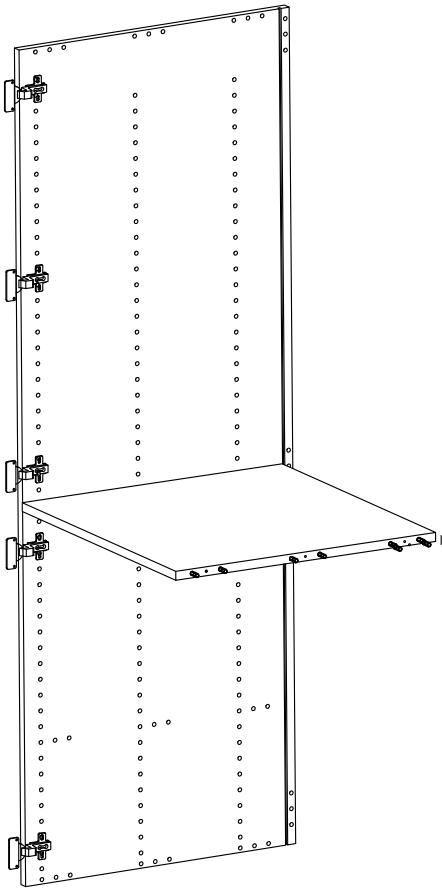


One Drawer Utility

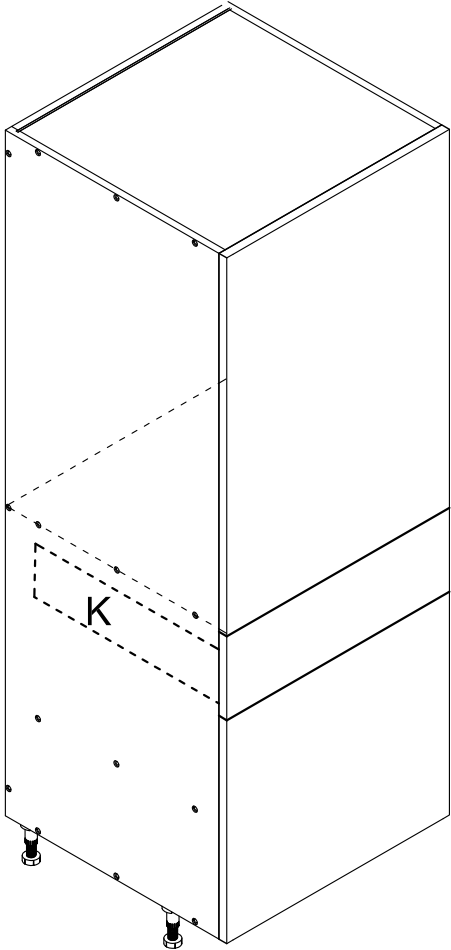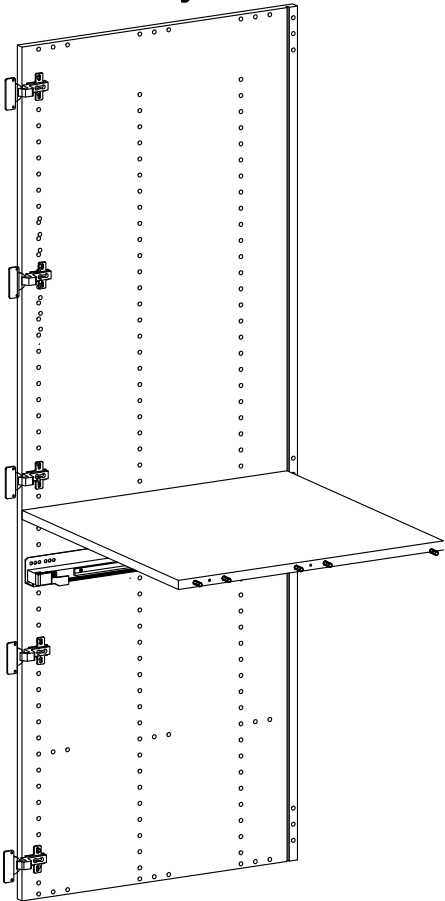   


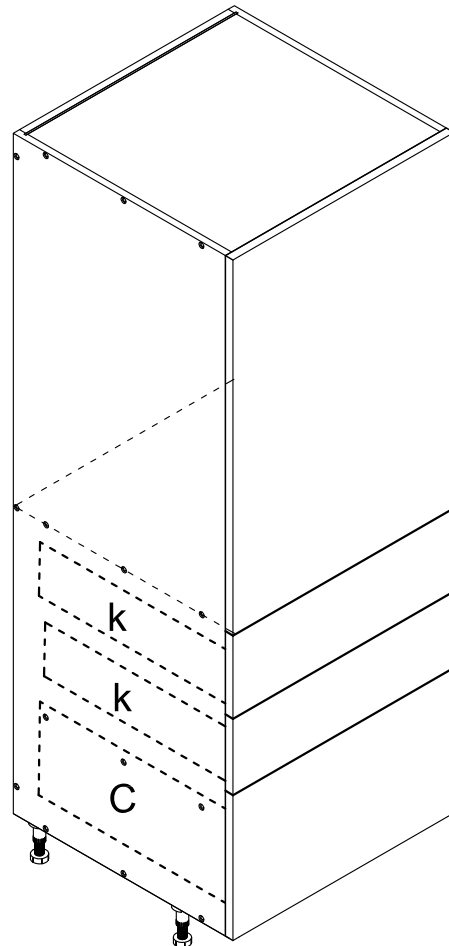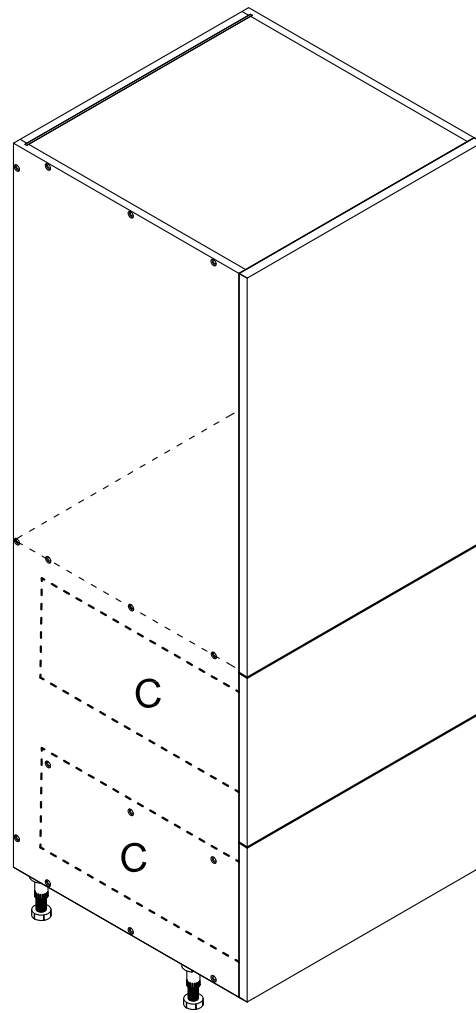    



Two Drawer with Inner Drawer Utility

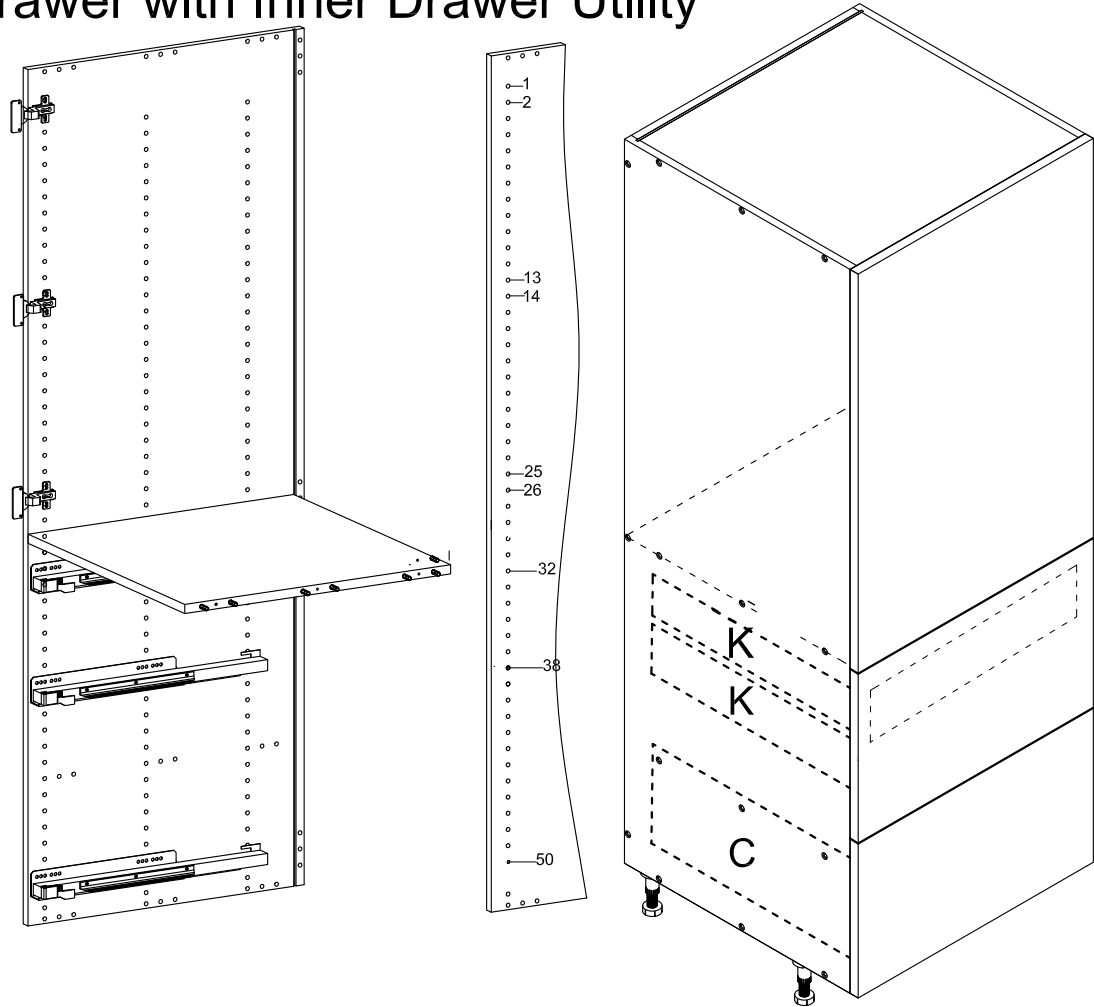 



Four Drawer Utility

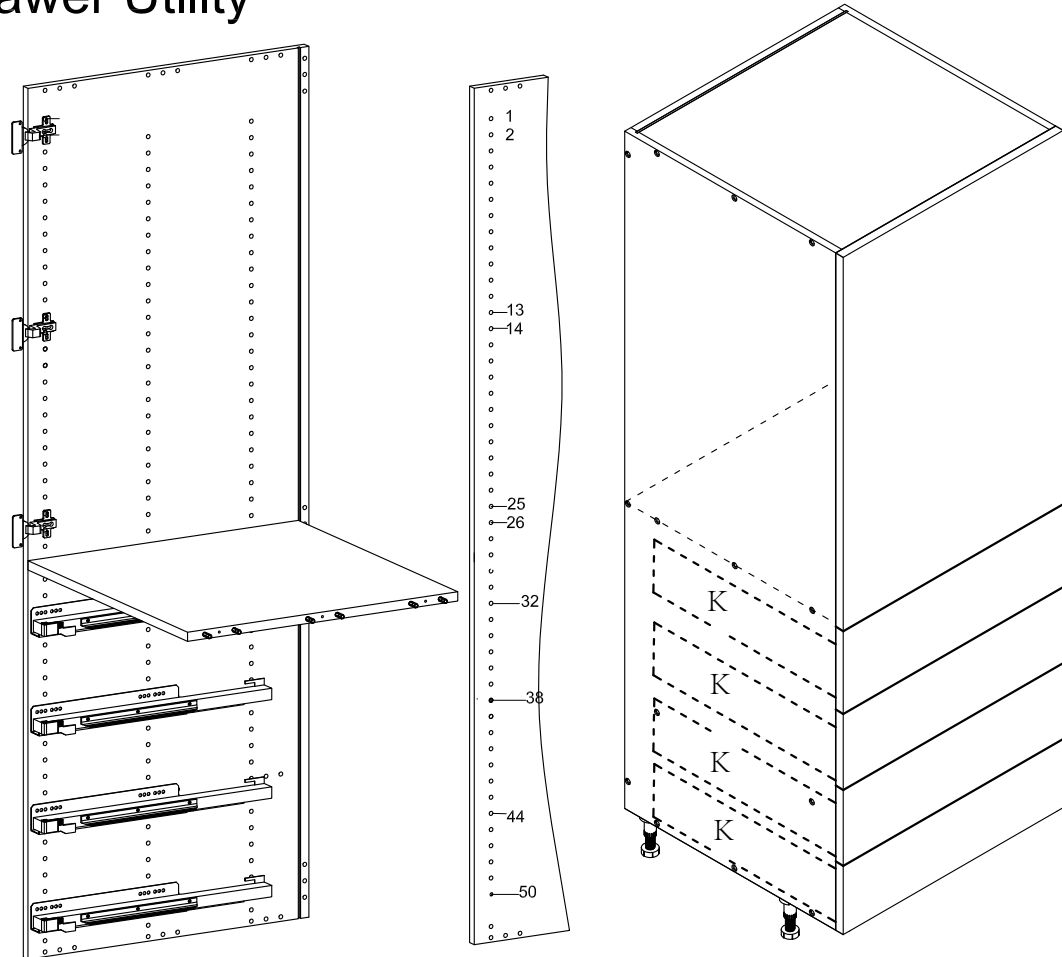 



Double Oven Utility

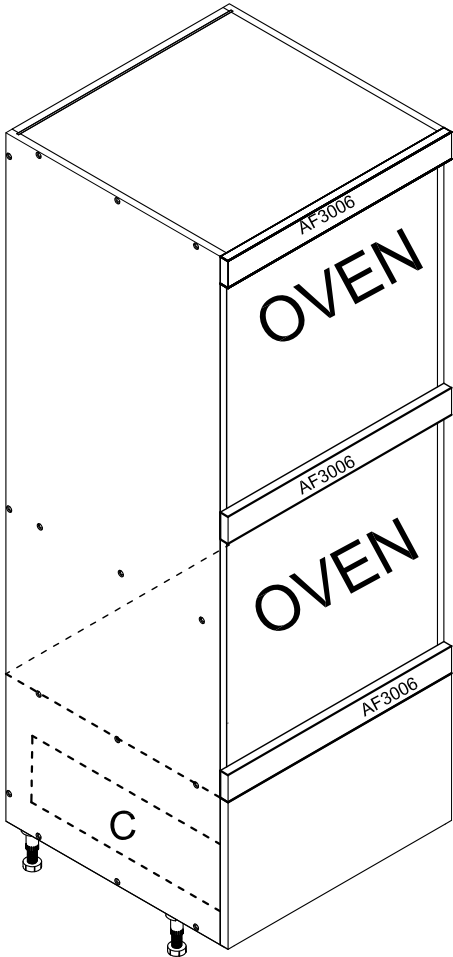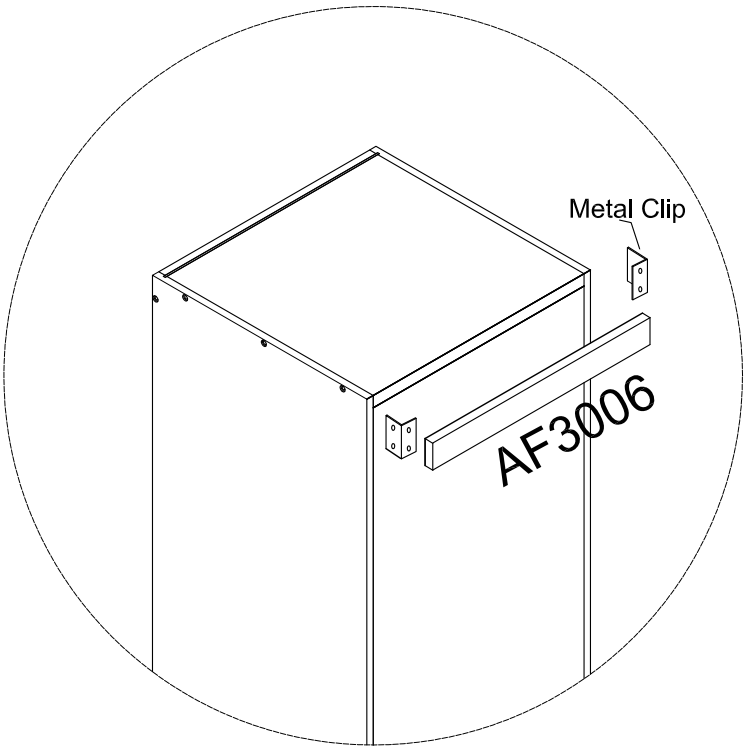  


Single Oven Utility

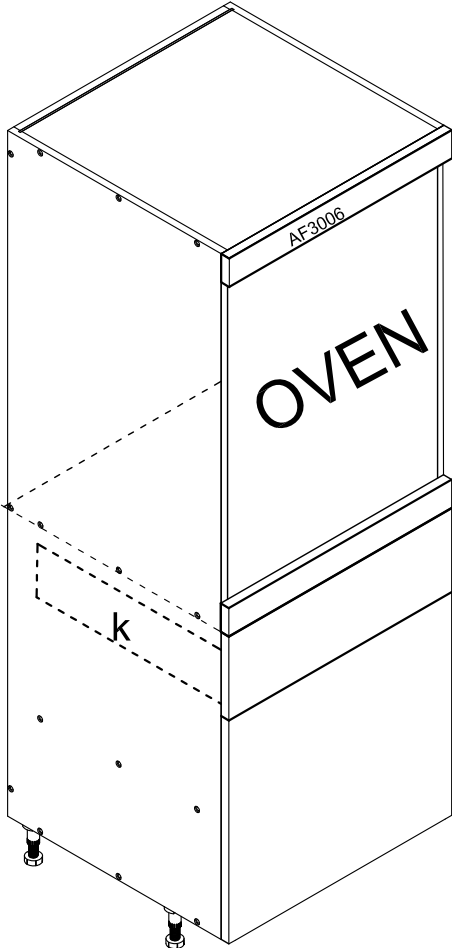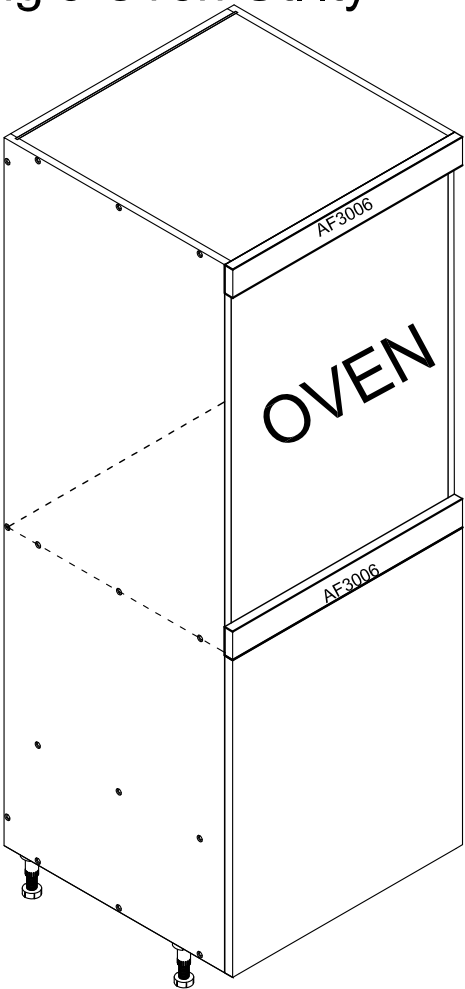  

Single Oven Utility

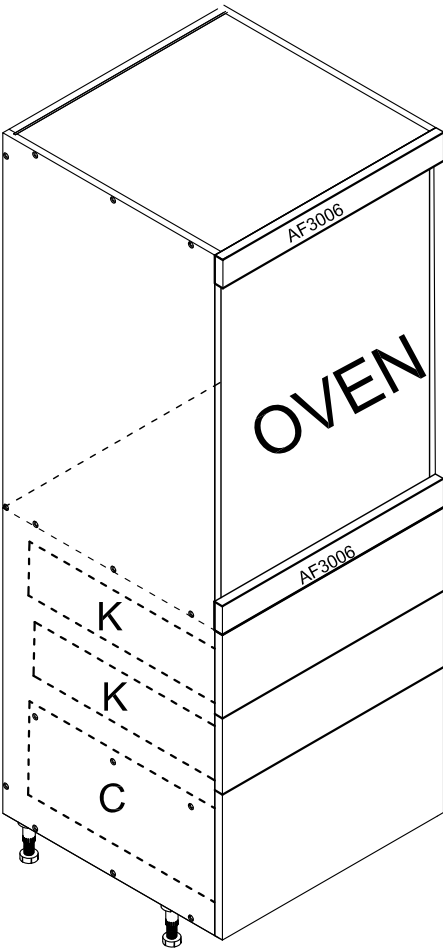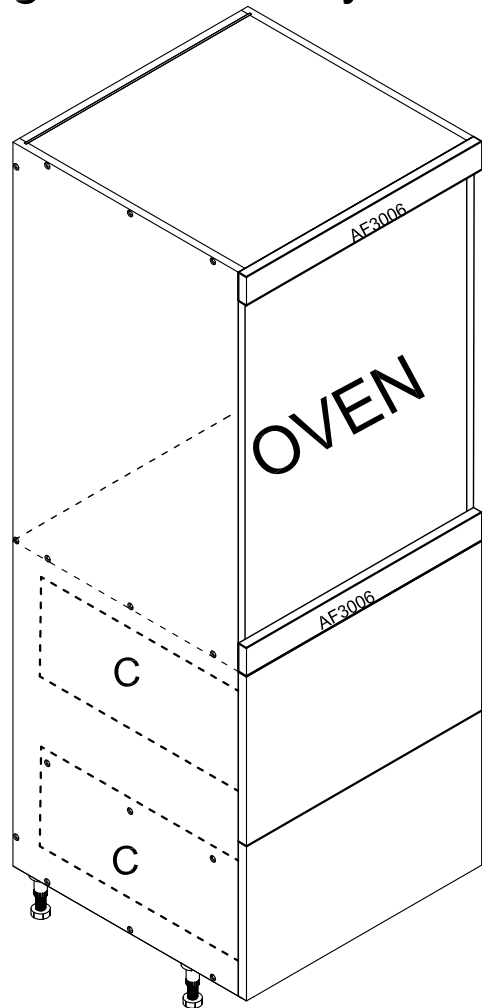  


Single Oven Utility

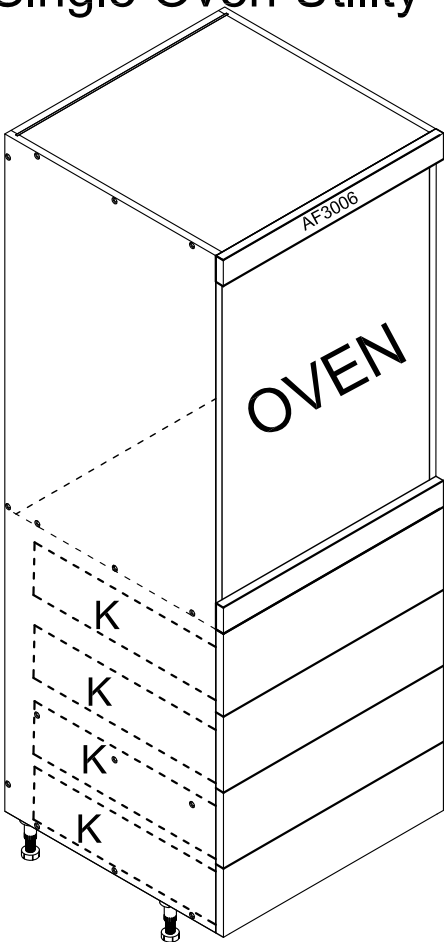 


1 Assembly

 
First, slide all the hinges, from the front, onto the mounting plates.

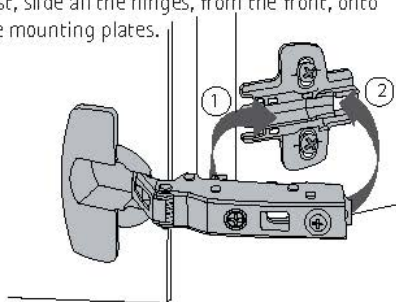**2**

 
Then press lightly on each successive hinge until the arm latches onto the mounting plate with an audible click!

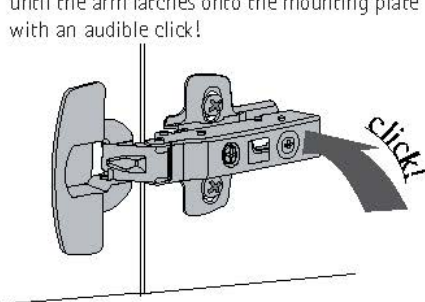**3 Disassembly**

 
It is carried out in the opposite direction from bottom to top. The hinge is unlatched by pressing lightly on latch (1) which is hidden under the side arm.

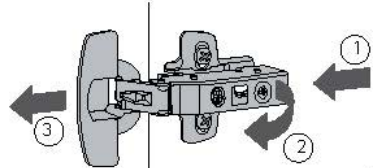**4**

 In one movement, the hinge arm is lifted off the mounting plate (2) and the door is removed from the cabinet (3).

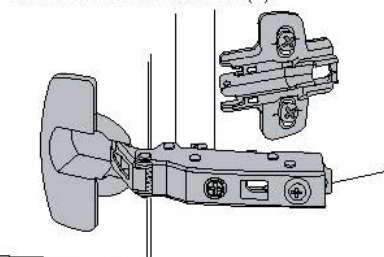**i**

 Remove cover cap for hinge adjustment

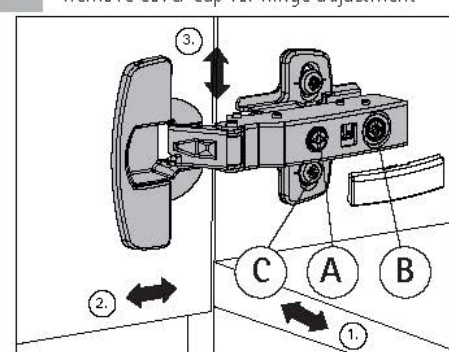**Adjustment****1. Overlay adjustment: + 2 / - 2 mm**

Turn screw (A) clockwise:

Door overlay decreases (-).

Turn screw (A) anticlockwise:

Door overlay increases (+).

2. Depth adjustment: + 3 / - 2 mm

Direct, infinitely variable depth adjustment by turning the screw (B).

3. Height adjustment: + 2 / - 2 mm

Loosen fixing screws (C) slightly and adjust height of door. Then tighten fixingscrews again.

Technische Änderungen vorbehalten.
Keine Gewährleistung für Druckfehler
und Irrtümer.

Subject to technical alterations.
Errors and omissions excepted.

Sous réserve de modifications techniques.
Notre responsabilité ne sera
engagée en cas de fautes de frappe
ou d'erreurs.

Salvo modifiche tecniche.
Nessuna garanzia per errori di
stampa ed errori.

 
Se reserva el derecho a realizar
modificaciones técnicas. No ofrecemos
garantía alguna respecto a eventuales
erratas de impresión u otros errores.

Technische wijzigingen
voorbehouden.
Wij zijn niet verantwoordelijk voor
drukfouten of andere vergissingen.


DRAWER BOX HEIGHT




K

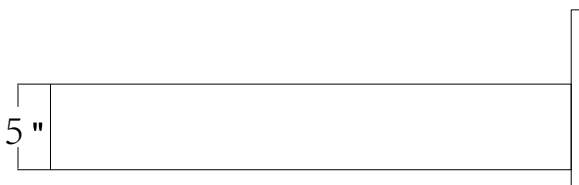

K







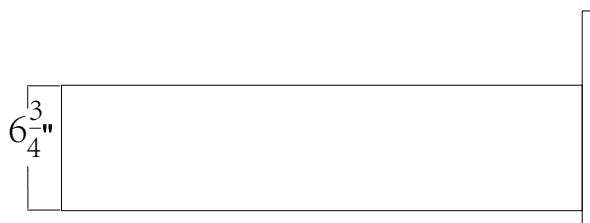 



C

 


Drawer Box

        Assembly and adjustments

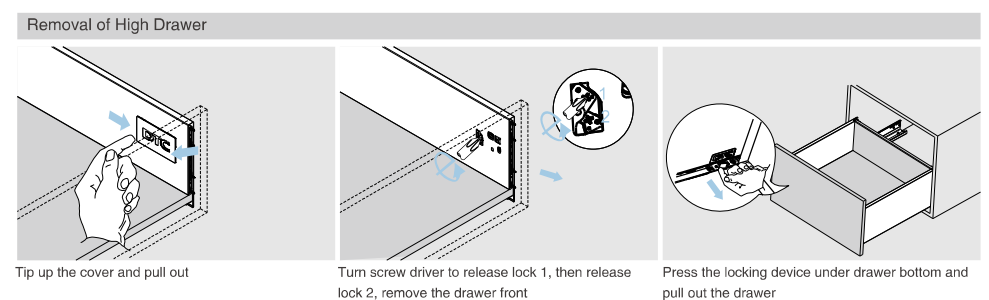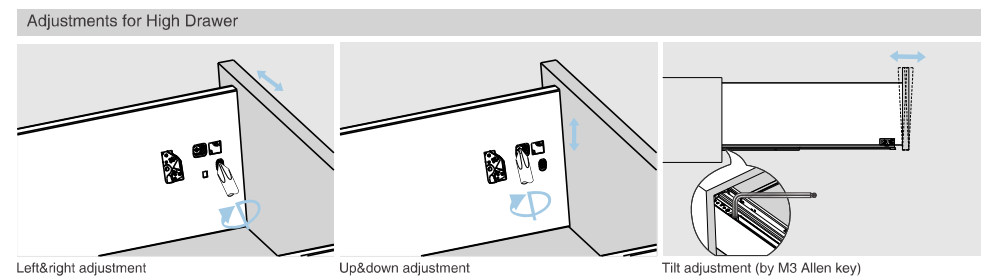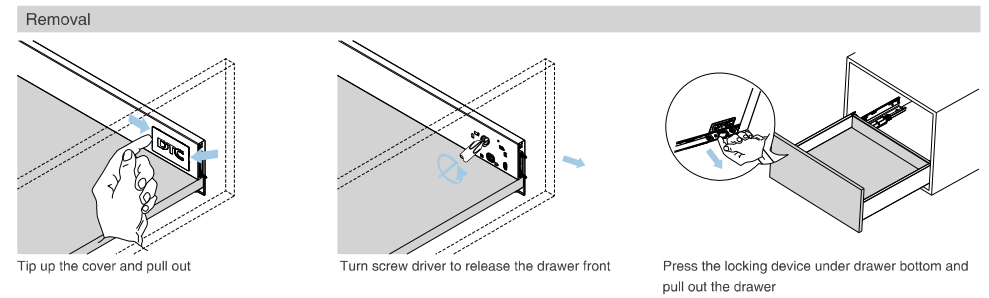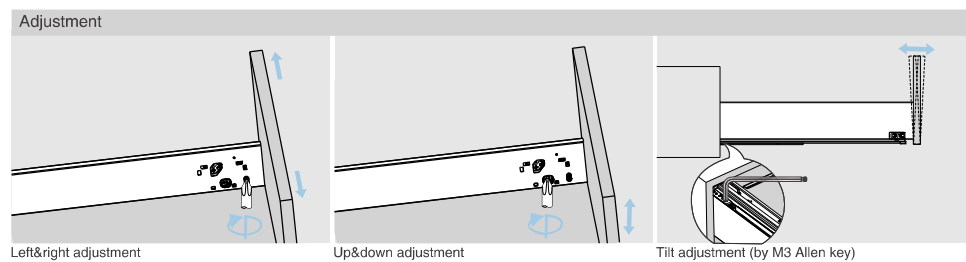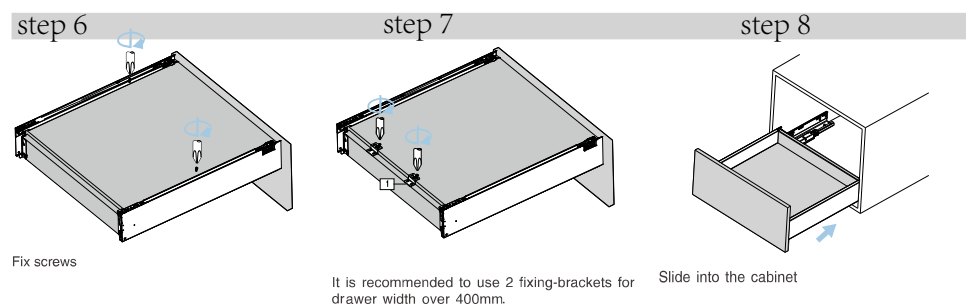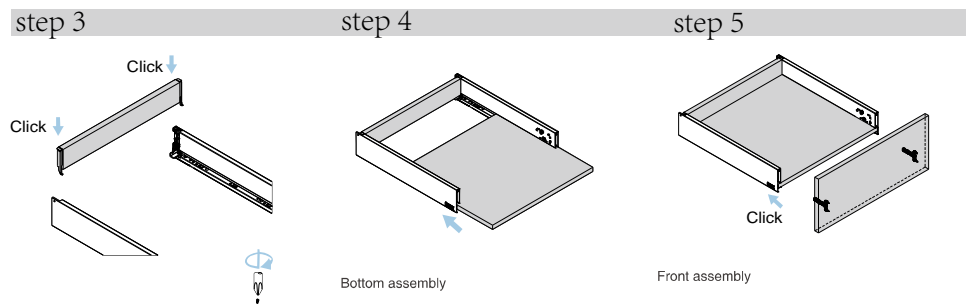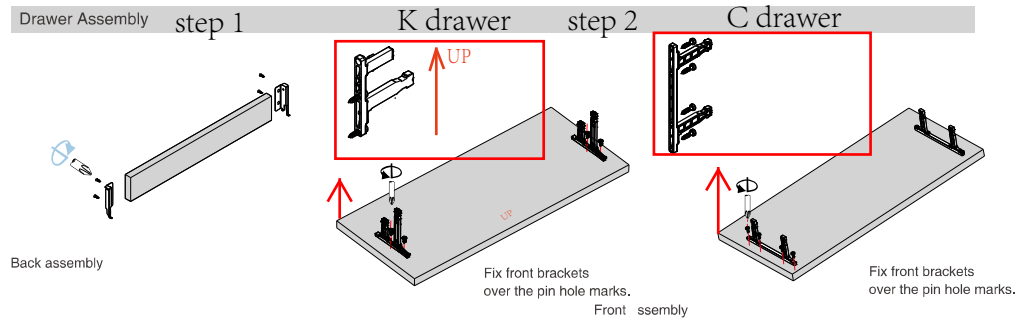


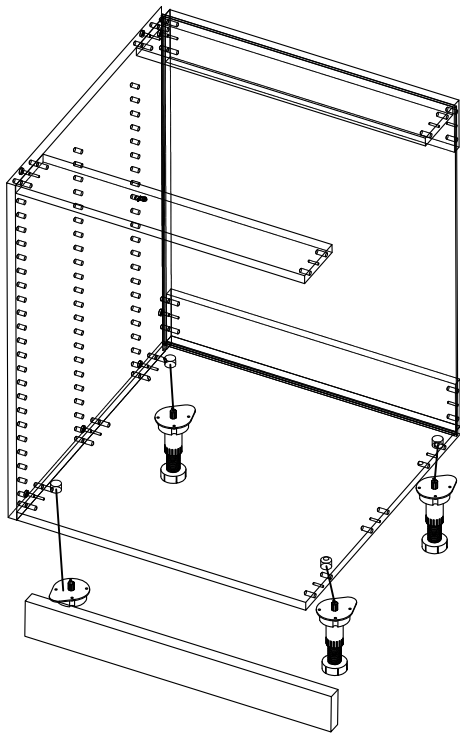

front

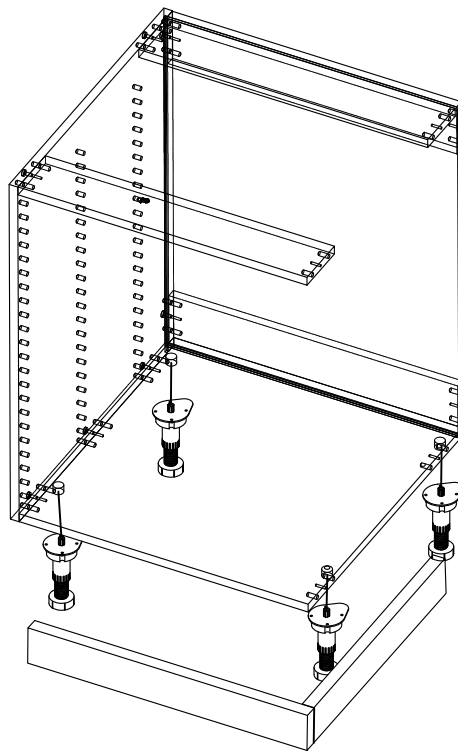 

front and right

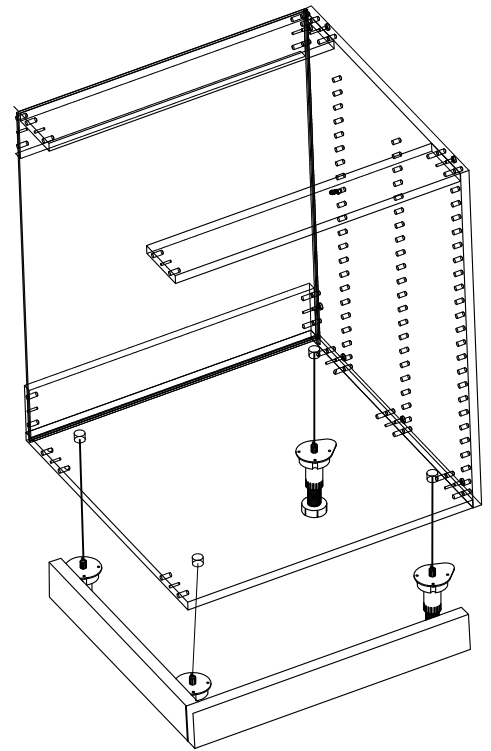 

front and left

LEGS AND TOEKICK

require screwing in, no
predrilled holes

