



# Lazy Susan Corner Base Cabinet Assembly Instructions

**Important:** When attaching two cabinets together, pre drill holes on the face frame to avoid material split.

This assembly instruction applies to DCB3612 only.

Parts included:

	Item	Qt
A	Face Frame	1
B	Face Panel	1
C	Left Side Panel	1
D	Right Side Panel	1
E	Bottom	1
F	Back Panel	1
G	Shelf	1
H	Long Toe Kick	1

	Item	Qt
I	Short Toe Kick	1
J	Corner Braces	4
K	Door Assembly	2
L	1/2" Corner Brace Screws	8
M	1/2" Large Head Screws	16
N	1/2" Door Assembly Screws	9
O	Turntable	2
P	Turner	2

## Step by step

1. Check and count the items in the box before your installation. If you are short any pieces, stop and call the supplier. Otherwise, follow the steps below.
2. Assemble Bottom and Shelf turntable set: put bottom (E) on a soft surface. Make sure the side has screw marks face up. Put the Turner (P) on top of it. Align them with screw marks and secure with 1/2" large head screws. Then, put Turntable (O) on a soft surface. Make sure the side has screw marks face up. Put bottom (E) on the top of it with assembled turner face down. Use the hole on the bottom panel to find the screw marks and secure with 1/2" large head screws. Now the Bottom w/ Turntable set is ready. Use the same procedure for building the Shelf w/Turntable set.
3. Assemble Door set: put two doors set one soft surface and align them from the screw marks. Then secure with 1/2" screws (N)
4. Put the face frame (A) face down on a flat soft working surface (Figure 1).
5. Insert left side panel (C) into the grooves of face frame (A) on the magnetic latch side. Align the plastic half part of the cam lock connectors. Make sure it fits and lock connectors with screwdriver by turning the screw located on the cam lock connector to the right 180 degrees (Figure 10). stand up side panel up right at this time.
6. Insert bottom w/ turntable (E) through race frame, well align the cam locks and lock the connectors.
7. Insert right side panel (D) into the grooves of face frame (A). Align the cam lock and lock connectors. (Figure 5)
8. Place the back panel and align the cam lock connectors with side panels. Make sure that it fits and locked. (Figure 6)
9. Insert shelf w/ turntable into position on short shelf steps, align the cam lock at bottom and tighten as shown in Figure 10.
10. Place the face panel and align the cam lock connectors with side panels. Make sure that it fits and locked. (Figure 7)
11. Place and mount door assembly (K) into the two cam lock connectors on face frames first then into connectors on the right side panel. Make sure that all fits and lock the cam lock connectors on face frame first then into connectors on the right side panel. Make sure that all fits and lock the cam lock connectors. Screwing short toe kick (I) to long to kick (H) with cam lock, then put onto the cabinet under the door. Make sure that all fits and lock the cam lock connectors. Reposition the cabinet back to upright and cam lock bottom to the frame under the door.
12. Install Corner Braces (Figure 8, 9): position and insert the 4 plastic corner braces in the locations shown in Figure 8 and 9, secure them with 1/2" screws (L).



Figure 1

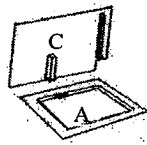


Figure 2

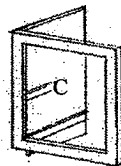


Figure 3

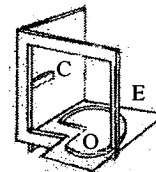


Figure 4

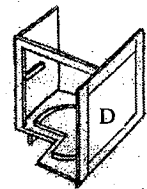


Figure 5

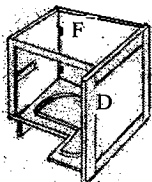


Figure 6

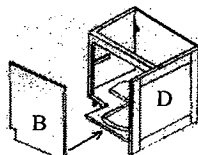


Figure 7

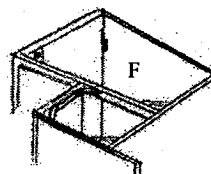


Figure 8

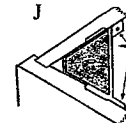


Figure 9

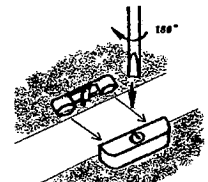


Figure 10